TERRATRIP DUAL SENSOR INTERFACE

Part No. T014

The DSI is designed to operate 2 Terratrip units from 1 Terratrip probe and/or to allow a signal to be taken from cars fitted with electronic speed sensors by the manufacturer. It is not intended to work from ABS sensors.

IMPORTANT NOTES

1. It may be necessary for the small adjusting screw to be turned to make the DSL work when connected to a car manufecturers speed sensor.

- 2. All unused connectors <u>MUST</u> be insulated or the DSI will be damaged. No warranty claim will be considered in this instance.
- 3. There are two output pins O/P1 and O/P2. O/P1 gives one pulse to the Terratrip for each input pulse to the DSI. O/P2 gives one pulse to the Terratrip for each four pulses to the DSI. Generally it is best to use O/P2 when connecting the DSI to a car manufacturers speed sensor. In all cases aim to use the output which gives a calibration number in the range 1000/5000.

