



SEAT IBIZA 1.2 TSI INDUCTION INSTRUCTIONS



Tools needed:

Flat head screwdriver


10mm socket & suitable ratchet

Hose clamp drive

T25 torx screwdriver

T30 torx screwdriver


1. Between the filler for the washers and the battery undo the T30 torx.

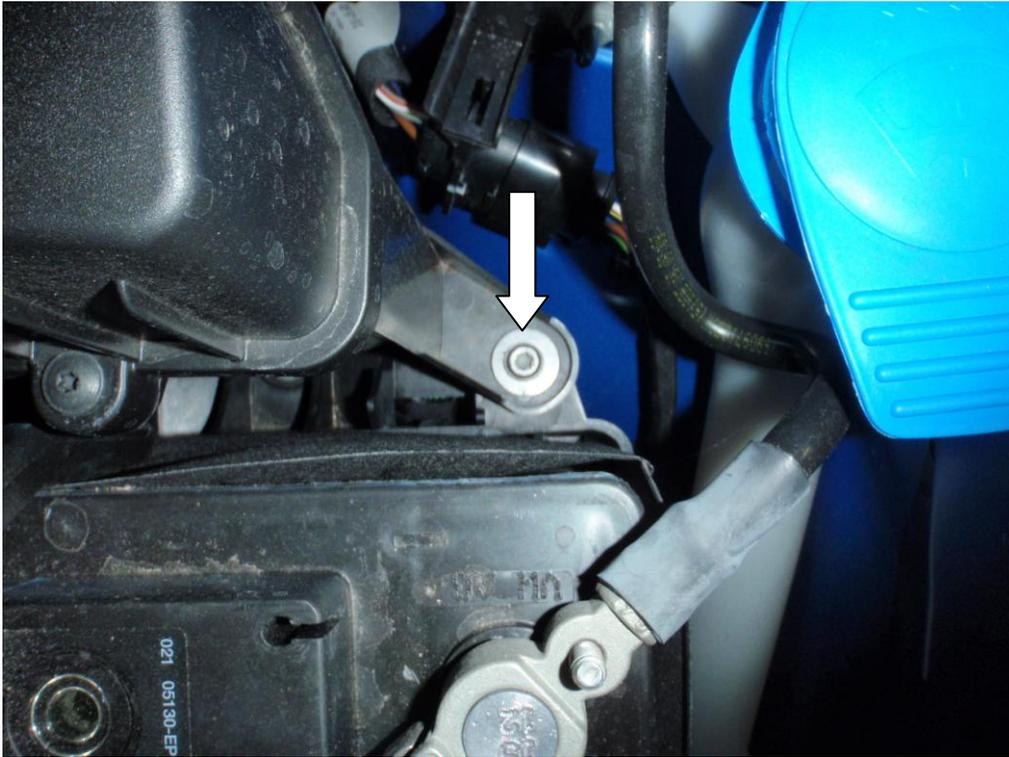

2. Remove the plastic pipe by removing the two clips.




5. Undo the T25 screws holding the cold air feed and remove then undo the T30 torx screws on the turbo hosing holding the resonator pipe and remove.

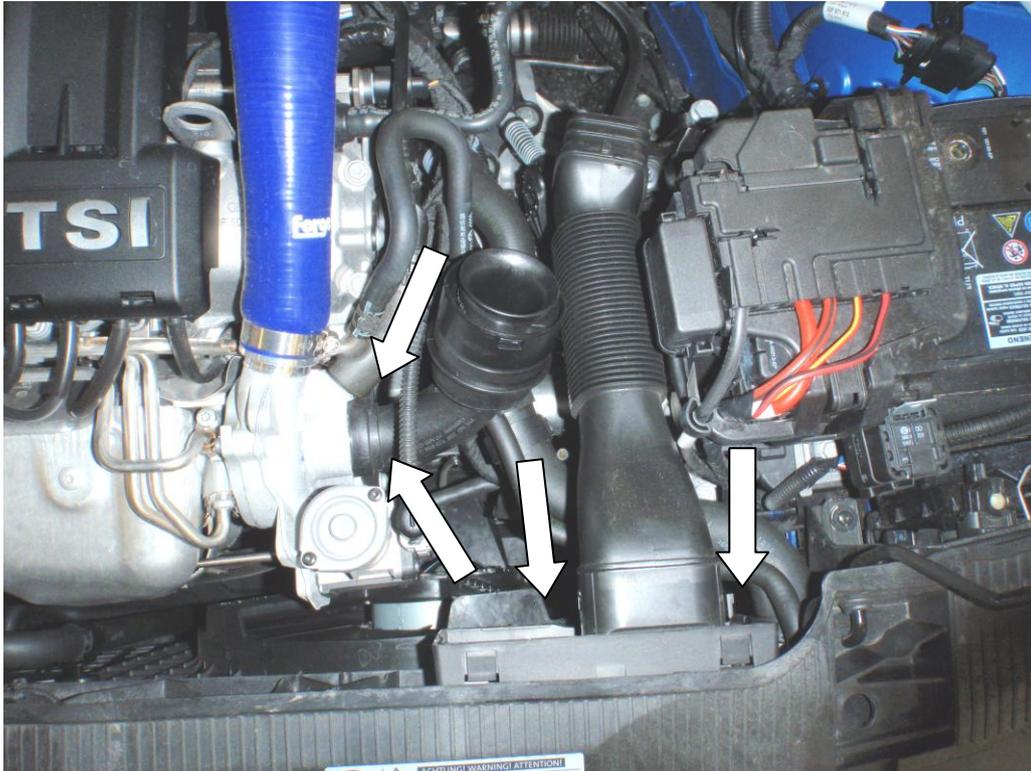

6. Connect the supplied turbo inlet connector using the supplied 5mm Allen head bolts.




7. Insert the aluminium tube into the silicon hose making sure not to block off the vacuum port and secure with JCS clip. Then Push the filter over the aluminium tube and secure with the JCS clip.

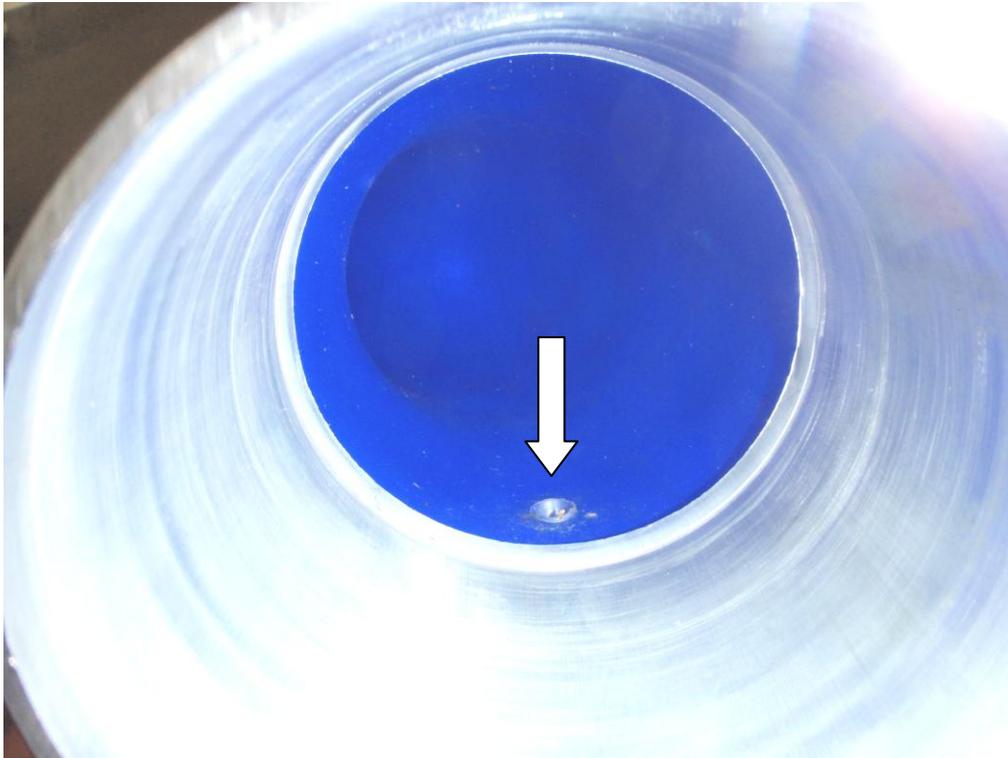


8. Push the silicon hose onto the turbo inlet and secure using the supplied hose clamp.
- 9.



10. Connect the vacuum pipe to the silicon hose using the small aluminium tube and JCS clips.

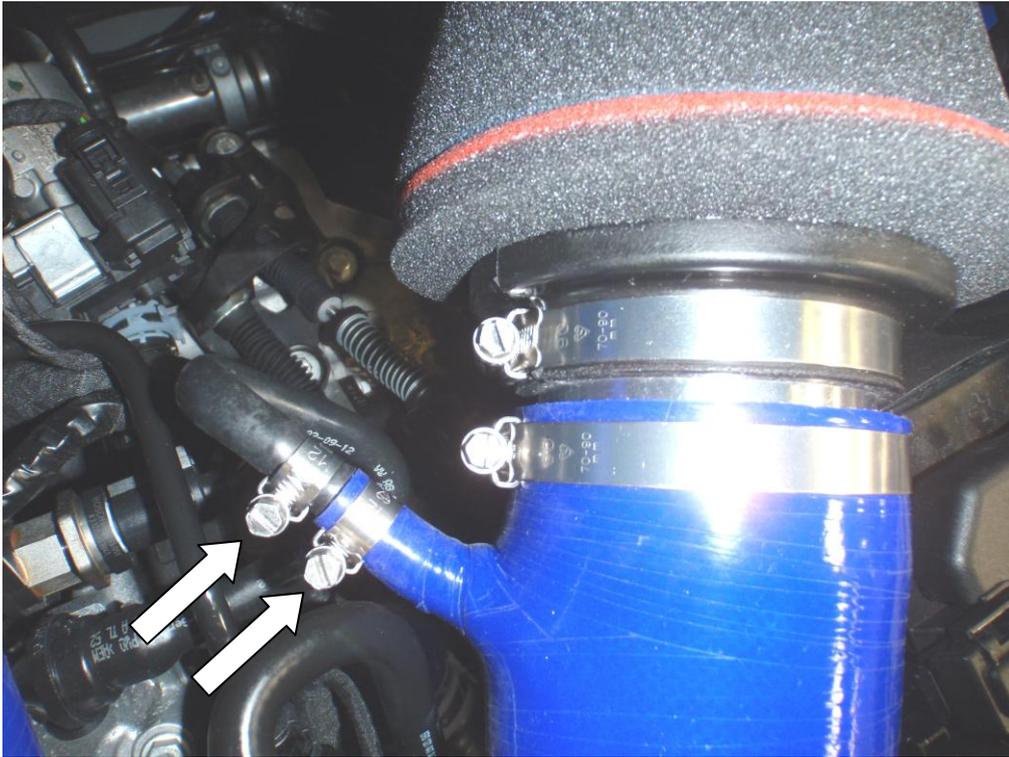

11. Fit the supplied L shape bracket to the engine as shown using the original T25 torx head bolt.

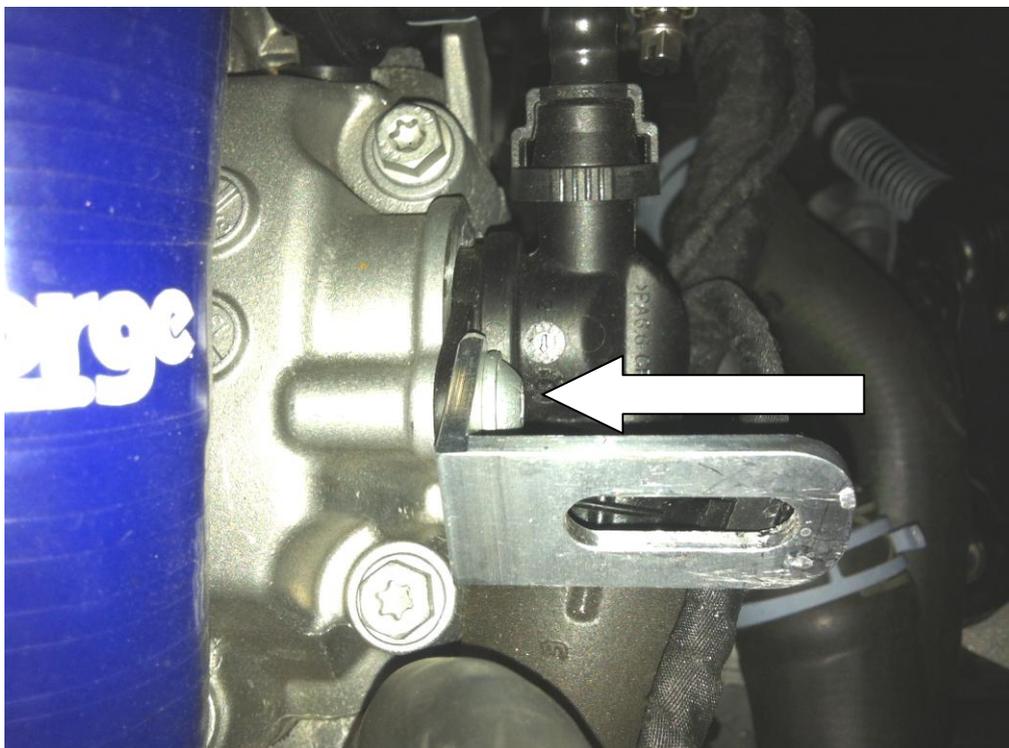

12. Secure the hose to the bracket using the P clip and supplied 5mm Allen head bolt.



12 Check all hose clamps are tight also that all bolts are tight then road test vehicle.



ENGINEERED FOR PERFORMANCE