

POWERFLEX®

PART NUMBER

PFF5-1321

DESCRIPTION

UPPER ENGINE MOUNTING BUSH INSERT

INSTALLATION GUIDE

Contents (parts per pack):

2 x PFF5-1321A Polyurethane Bushes

2 x PFF5-1321B Polyurethane Bushes

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.


It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the headlight assembly from the mount side of the vehicle.
2. Support the engine from underneath using a hydraulic jack.
3. Looking at the end face of the mount, and using the jack to finely adjust the engine height, insert the A bushes into the lower voids and B bushes into the upper voids as shown in the diagram.

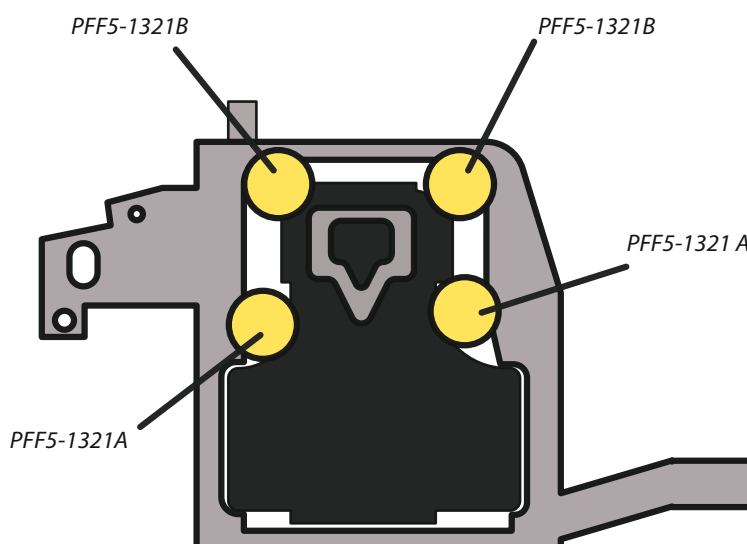

Tip: Applying some washing up liquid to the bushing rod inserts prior to assembly may help them slide into the mount easier.

4. Remove the jack and re-fit the headlight assembly.
5. Tension all hardware to the manufacturer's recommended torque settings.

